



Included / **Inbegriffen** / Inkluderat / Compris

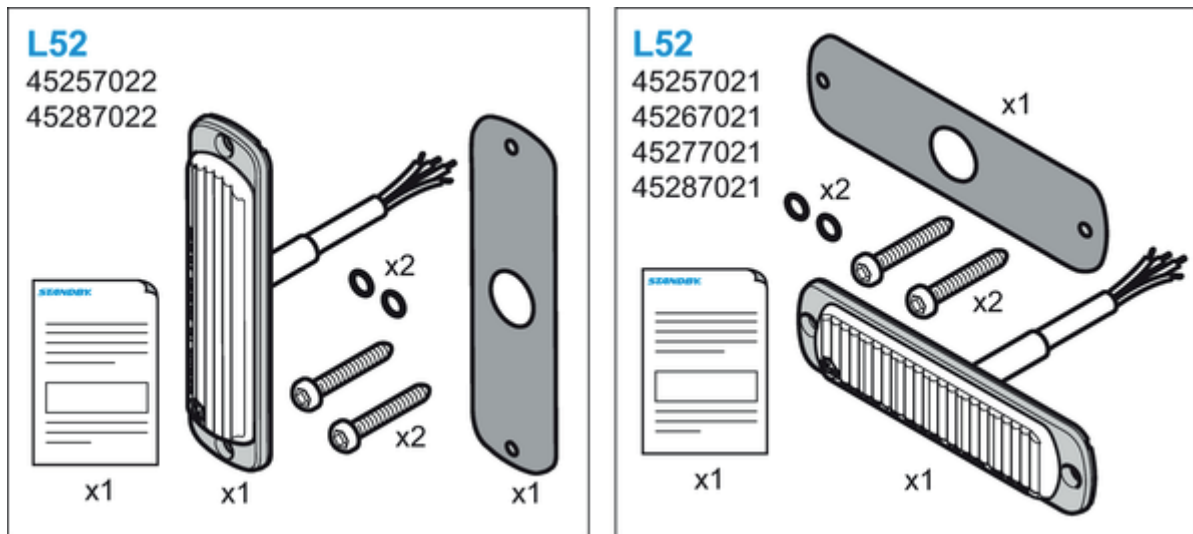

Enter **Configuration** mode / Geben Sie den
Ange **konfigurationsläge** / Entrez le mode


Konfigurationsmodus ein /
Configuration

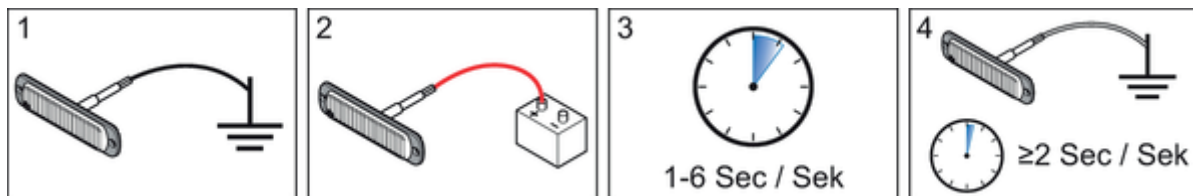

Configuration of Sync-mode & Flash Pattern /
läge & blinkmönster /
Modus / **Configuration** du mode Sync et du Pattern Flash

Konfigurering av synk-




Configuration von Sync-Modus & Blitz-

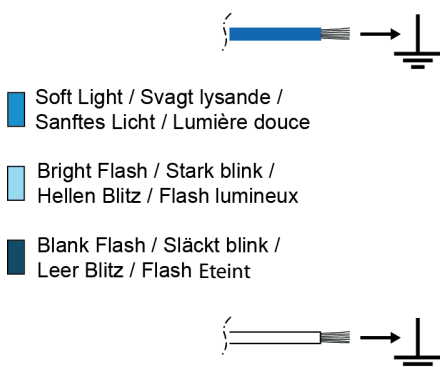


Version / Variant / Variant / Version	Flash Blink Blitz Flash	Sync-mode / Synk-läge / Sync-Modus / Sync Mode
#1	x1	Simultaneous (default)
#2	x2	Alternate

Version / Variant / Variant / Version	Flash / Blink / Blitz / Flash	Flash Pattern / Blinkmönster / Blitz Modus / Modèle Flash
#1	x1	Double (default)
#2	x2	Triple
#3	x3	Fixe 1
#4	x4	Fixe 2

Mounting / Montage / Montering / Montage

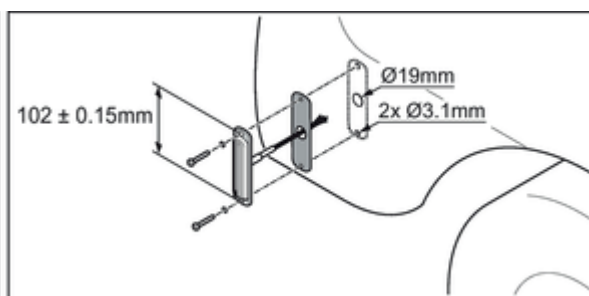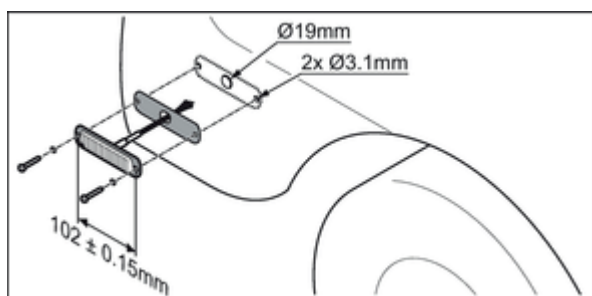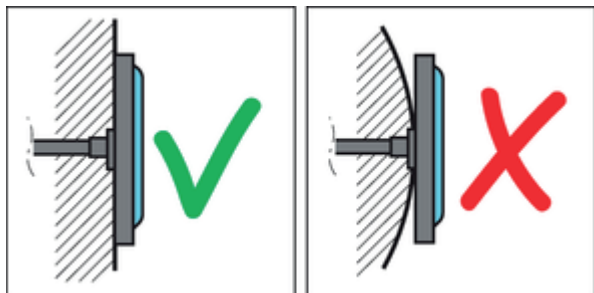

Connections / Anschlussbeschreibung / Inkoppling / Les liaisons

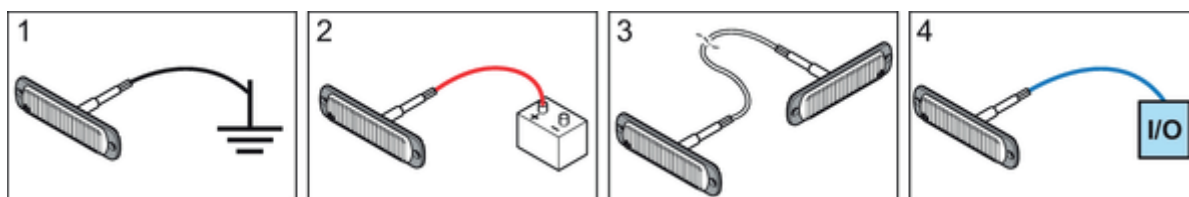

Reset to Factory Settings (default) / Fabriksåterställning (default) /
Zurücksetzen auf Werkubstellungen
(Standardinstellungen) / Réinitialiser les paramètres d'usine (par
défaut)

