


# 3LED WARNING LIGHTHEAD

## WIRING

To + VDC (fuse @ 1A): .....**RED**

To Chassis -Ground: .....**BLACK**

For Synchronization: ....**YELLOW**

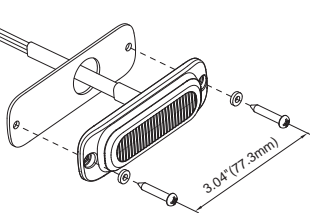

Connect **YELLOW** wires of all lightheads together for synchronization  
(All lightheads should be set at the same pattern)

## OPERATION

For Simultaneous or Alternating Flash:

- Apply +VDC to **RED** and **YELLOW** wires simultaneously to enter Grouping mode; lighthead will display short (single or double) flash:
  - Single flash = Group1
  - Double flash = Group2
- Remove **YELLOW** wire from +VDC and momentarily apply to +VDC to change Group:
  - Lighthead of the same Group will flash simultaneously.
  - Lighthead of the different Group will flash alternately.

For Flash Pattern, momentarily apply +VDC to **YELLOW** wire:

- once to next pattern
- quick three times to FP#1  
(see flash pattern chart)

**NOTE:** This unit may not be factory-set at Flash Pattern 1.

Flash Pattern				
1	Double	[R65]*	9	Double
2	Single	[2Hz]	10	Triple
3	Triple	[2Hz]	11	Quad
4	Quad	[2Hz]	12	Quint
5	Random		13	Ultra
6	Steady		14	Single-Quad
7	Single		15	Single H/L
8	Mega		16	Single-Triple-Quint

\*Actual approval is based on the model ordered.