
R65 MINI LIGHTHEAD Manual


Adhesive Mount

- Select a mounting location and clean the surface.
- Peel one side of the adhesive and apply to the lighthead base.
- Peel the other side of the adhesive and secure the head firmly to the surface.
- NOTE: Optimun adhesive strength is achieved after 24hrs.

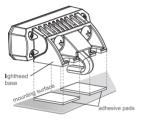

Bracket Mount

- 1. Select a mounting location for the lighthead.
- 2. Place the rubber pad to the bottom of the base.
- 3. Place the head to the mounting surface.
- Align top holes of the bracket onto the lighthead base alignment points.
- Secure the head with supplied screws from the bottom of the bracket.



Screw Mount

- 1. Select a mounting location for the lighthead.
- 2. Mark and drill mounting holes.
- 3. Place the rubber pad to the bottom of the base.
- Secure the head to the mounting surface with supplied screws.



